

Case STX & New Holland TJ/T9000 Ag Pro Undercarriage Installation Instructions

For Models:

Case STX Wheeled & Quadtrac: 480, 485, 530, 535 New Holland Wheeled: TJ480, TJ530, T9050, T9060 Purchase Date

Serial Number

Model Number

Tractor Model

Dealer


PN: 45042-INS **Serial Number:** 10208638-Current **Date:** 7-28-2024

To The Owner

This manual contains information concerning the installation of the undercarriage. You have purchased dependable, long lasting equipment, but only by proper care and operation can you expect to receive the performance and long service built into our products. Please have all operators read this manual carefully and keep the manual available for ready reference. If you have any questions or concerns, contact Grouser Products.

Caution:

- · Always use caution when working around any equipment.
- · Always wear safety glasses.
- Follow tractor manufacturer's safety guidelines when installing this product.
- · Use paint where necessary to prevent rust.
- Do not modify or permit anyone else to modify or alter the equipment and its components without first consulting Grouser Products.

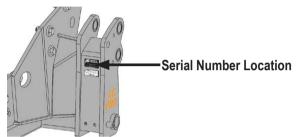

Note:

- When installing hardware, only finger tighten until all hardware is in place.
- A full diagram of the assembly with the full list of parts is on pages 4-7.
- Unstrap and remove any components that are attached for shipping.
- · Read all instructions prior to performing installation.



To ensure the safety of those working under and around the machine, apply parking brake, remove key from ignition, and block tires before working on the machine.


Pre-Installation

- 1. If applicable, remove front weights, weight bracket, tow cable, tow cable holder, and toolboxes from front of tractor.
- 2. Remove bottom 2 bolts from each side of front nose casting to allow more clearance for undercarriage.

Undercarriage Installation

3. Position and center undercarriage under tractor. Lift undercarriage until it is within 3/4" of touching tractor frame.


NOTE: When lifting undercarriage, watch for any potential pinching of hoses or any other components to prevent any damage.

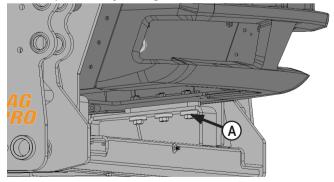


4. Install 6 - 20mm x 90mm bolts and 6 - 0.88" ID heavy washers in vertical slots at front of undercarriage (A). Turn in until washers make contact with undercarriage.

5. Lift rear of undercarriage until two rear mounting ears touch up against tractor's cross member.

NOTE: Be sure vertical push plates are firmly against cross member (B).

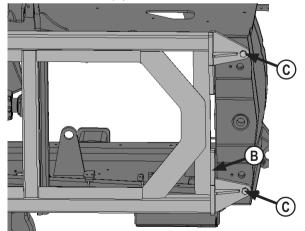


- Using two holes in rear ears as guides, drill 2 1" holes through cross member and install 2 - 1" x 3" bolts and 2 - 1" nuts (C).
- 7. Torque rear 1" bolts (C) to 903 ft-lbs.
- 8. Torque front vertical 20mm bolts (A) to 432 ft-lbs.

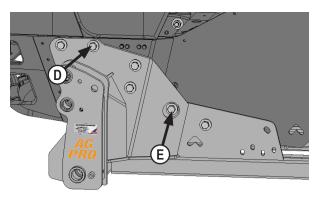


- 9. Using front undercarriage side holes as guides, drill 8 1" holes through side of tractor frame.
- NOTE: When drilling, be aware of all parts behind material being drilled so that you do not mistakenly hit or puncture components on engine side of tractor frame.
- **10.** Install 8 1" x 3-1/2" bolts, 16 1" ID heavy washers, and 8 1" nuts in front holes of undercarriage and previously drilled holes on tractor **(D)**.
- **11.** Install 4 1" x 3" bolts, 8 1" ID heavy washers, and 4 1" nuts in side holes of undercarriage and tractor frame (E).
- 12. Torque the side 1" bolts (D & E) to 903 ft-lbs.
- **13.** Reinstall front nose casting bolts removed in Step # 2.

Quad - Installation Only:

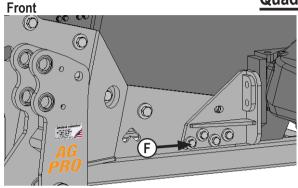


14. Attach quad brackets to sides of undercarriage with 8 - 3/4" x 3" bolts, 16 - 3/4" heavy washers, and 8 - 3/4" nuts (**F**).

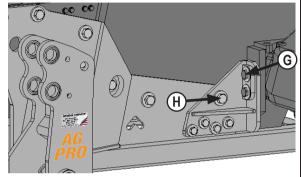


- **15.** Remove 2 24mm bolts and spacers from front axle on both sides. Discard spacers.
- 16. Dip previously removed 24mm bolts in W30 oil.
- **17.** Attach quad brackets to front axle with original 24mm bolts from Step #15 and 4 1" flat washers **(G)**.
- **18.** Install 2 1" x 3-1/2" bolts, 4 1" ID heavy washers, and 2 1" nuts in side holes of quad bracket and tractor frame **(H)**.
- 19. Torque 24mm axle bolts (G) to 555 ft-lbs.
- 20. Torque quad bracket 1" bolts (H) to 903 ft-lbs.
- 21. Torque quad bracket 3/4" bolts (F) to 257 ft-lbs.


Hose Routing

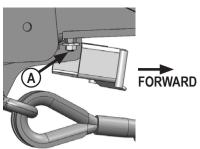

- Gather and position hoses inside hose routing bracket. Raise rear hose routing bracket with hoses and attach to 20mm bolts located at front of rear tractor frame behind pivot area. Attach with 2 - 20mm nuts (A). Ensure lip of bracket is facing towards front of tractor.
- 2. Torque the 20mm nuts to 432 ft-lbs (J).

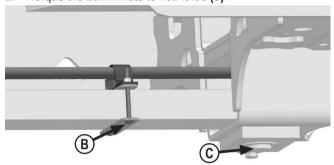


- 3. Install front holding plates (B) 12" from center of drawbar pin at front of drawbar (C) with 2 3/8" x 4-1/2" carriage bolts, 1 or 2 hose straps and 2 3/8" flange nuts.
- **4.** Continue routing hoses over drawbar and loosely wrap hoses with velcro straps.

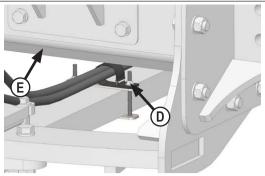

- 5. Install rear holding plates (D) half-way between rear axle and rear tractor frame (E) with 2 3/8" x 4-1/2" carriage bolts, 1 or 2 hose straps and 2 3/8" flange nuts.
- **6.** Continue routing hoses over drawbar and loosely wrap hoses with velcro straps.

NOTE: Before tightening any velcro straps, turn and articulate tractor to provide slack in hoses at pivot point.

- 7. Tighten velcro straps to secure hoses.
- 8. Insert couplers in open SCV's at back of tractor.
- Perform an articulation check to make sure hoses do not get pulled when fully articulated. Make adjustments and allow adequate slack if necessary.

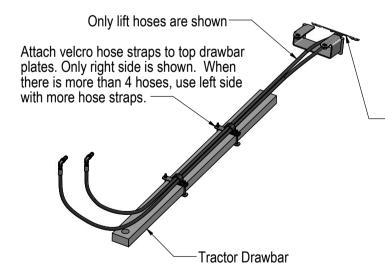


 Leave slack in hoses at oscillation point for hoses to move when tractor oscillates.
 When tractor is fully turned and oscillated, hoses will move about 1".

Assembling Lift Components


Refer to the Blade Owner's Manual & Parts Book for instructions on how to assemble the lift components.


Maintenance

- 1. After first 8 hours of use, re-torque all bolts.
- 2. Check all fasteners regularly to ensure proper operation of equipment.
- 3. Inspect all equipment for existing or potential damages every 10 hours or less.

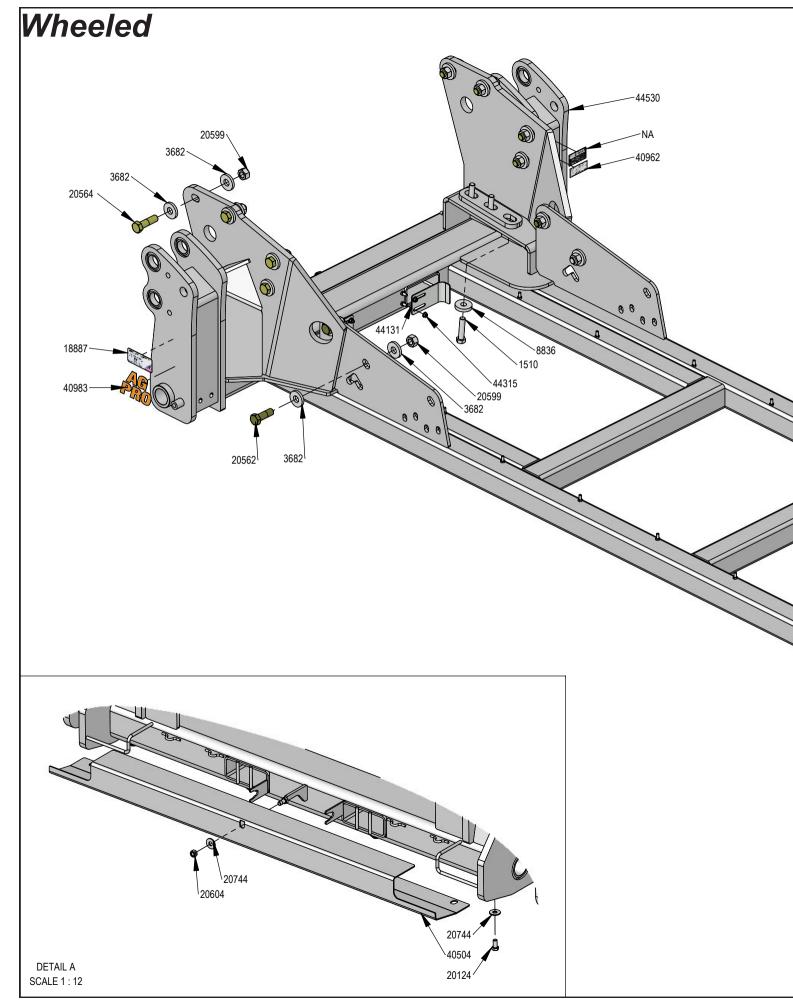

PART NO.	QTY.	DESCRIPTION
1510	6	20mm x 2.5mm x 90mm Hex Bolt Gr 10.9
3682	24	1.00" ID x 2.50" OD x .375" Heavy Washer
8836	6	7/8" x 2-1/2" x 1/2" Flat Washer
17245	2	Plate
18887	1	Grouser Name Plate Decal - Made in USA
20124	4	1/2" X 1" Hex Bolt Gr 5 NC CZ
20562	6	1" X 3" Hex Bolt Gr 8 NC YZ
20564	8	1" X 3-1/2" Hex Bolt Gr 8 NC YZ
20599	14	1" Hex Nut Gr 8 NC CZ
20604	1	1/2" Hex Center Lock Nut Gr 5 NC CZ
20744	5	1/2" Flat Washer CZ
20872-10	2	M20-2.5 Class 10.9 Hex Nut CZ
21077	4	3/8" x 4-1/2" Carriage Bolt Gr 5 NC CZ
40504	1	Plate, Cover
40518	1	Hose Routing Bracket
40962	1	Warning Prop 65 Decal
40983	2	Ag Pro
44131	2	Plate, Hose Cover
44315	8	3/8" Nyloc Flange Nut Gr N5 NC
44530	1	STX, Quad, & TJ Wide Frame UC Weld
44853	2	Plate, Drawbar Clamp
NA	1	Serial Number Tag

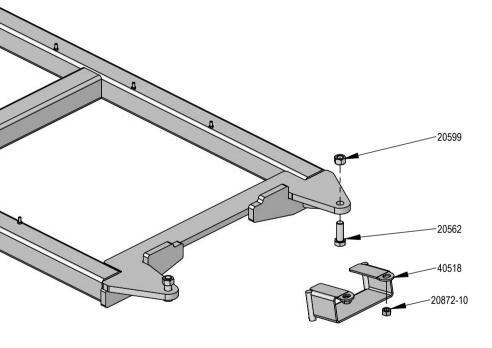

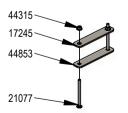



DWG. NO.: 44535-A

Quad 3682 \ ~5170-R 3682 ~20599 ~3682 7 3682 [/] 20222 l 5170-L DETAIL A SCALE 1:12

	DESCRIPTION	QTY.	PART NO.
mm Hex Bolt Gr 10.9	20mm x 2.5mm x 90	6	1510
x .375" Heavy Washer	0.75" ID x 2.00" OD :	16	3680
x .375" Heavy Washer	1.00" ID x 2.50" OD x	28	3682
	Quad Bracket - Left	1	5170-L
nt	Quad Bracket - Right	1	5170-R
lat Washer	7/8" x 2-1/2" x 1/2" F	6	8836
	Plate	2	17245
e Decal - Made in USA	Grouser Name Plate	1	18887
Sr 5 NC CZ	1/2" X 1" Hex Bolt Gi	4	20124
6r 5 NC CZ	3/4" X 3" Hex Bolt Gi	8	20222
8 NC YZ	1" X 3" Hex Bolt Gr 8	6	20562
Gr 8 NC YZ	1" X 3-1/2" Hex Bolt	10	20564
CZ	1" Hex Nut Gr 8 NC	16	20599
ck Nut Gr 5 NC CZ	1/2" Hex Center Lock	1	20604
ck Nut Gr 5 NC CZ	3/4" Hex Center Lock	8	20607
7	1/2" Flat Washer CZ	5	20744
vy Duty Gr 8 (USS) YZ	1" Flat Washer Heav	4	20819
Hex Nut CZ	M20-2.5 Class 10.9 I	2	20872-10
ge Bolt Gr 5 NC CZ	3/8" x 4-1/2" Carriage	4	21077
	Plate, Cover	1	40504
et	Hose Routing Bracke	1	40518
ecal	Warning Prop 65 De	1	40962
	Ag Pro	2	40983
	Plate, Hose Cover	2	44131
ut Gr N5 NC	3/8" Nyloc Flange Nu	8	44315
	STX, Quad, & TJ Wid	1	44530
	Plate, Drawbar Clam		44853
'iP	Serial Number Tag		NA



-20599

20562

40518

20872-10



DWG. NO.: 44540-A

Improvements

Grouser Products Inc. is continually striving to improve its products. We reserve the right to change prices, specification, or equipment at any time without notice. We also reserve the right to make improvements or changes when it becomes practical and possible to do so without incurring any obligation to make changes or additions to the equipment sold previously.

Warranty

Grouser Products warrants to the original purchaser of each item that the product be free from defects in material and workmanship under normal use and service for a period of two (2) years for Agriculture Series Blades and one (1) year for Heavy Duty Series from date of original retail delivery.

The obligation of the consumer under this warranty:

- 1. To read the operators manual and to operate, lubricate, maintain and store equipment in accordance with the instructions listed in the operators manual.
- 2. To inspect equipment and if any part needs repair or replacement when continued use would cause damage or wear to other parts or safety.
- 3. All equipment or parts claimed to be defective in material or workmanship must be made available for inspection at the place of business of a dealer authorized to handle the equipment covered by this warranty, or, upon request by Grouser Products, shipped to the Grouser Products factory in West Fargo, North Dakota.

The obligation of the dealer under this warranty:

- 1. Complete warranty registration form and submit within 30 days of sale.
- 2. Contact Grouser Products for authorization prior to performing any warranty repairs or part replacement.
- 3. Complete warranty request form and submit with photos and supporting documentation.

The obligation of Grouser Products under this warranty:

- 1. Repair or replace, any equipment or parts, in the judgment of Grouser Products to be defective in material or workmanship.
- 2. Grouser Products will cover the cost of parts and ground shipping at dealer invoice only.
- 3. Grouser Products shall have no obligation to bear the cost of labor or transportation in connection with replacement or repair of any such defective parts.

This warranty does not cover:

- 1. Depreciation or damage caused by normal wear, accident, improper assembly, improper adjustments.
- 2. Improper maintenance including lack of proper lubrication, or improper use. Including loose bolts, nuts, or fitting due to over tightening or vibration after 20 hours of operation.
- 3. Repairs or alterations without authorization from a Grouser Products representative.
- 4. Grouser Products shall have no liability if the equipment has been altered or reworked without the written authorization of Grouser Products.

Grouser Products' parts, which are furnished under this warranty and properly installed, shall be warranted to the same extent as the original parts under this warranty if, and only if, such parts are found to be defective within the original warranty period covering the original equipment.

NO EMPLOYEE OR REPRESENTATIVE OF GROUSER PRODUCTS IS AUTHORIZED TO CHANGE THE WARRANTY IN ANY WAY OR GRANT ANY OTHER WARRANTY.

Contact Us

As always, if you have any questions about your system or other products made by Grouser, feel free to contact us.

